APPLICATION DESIGN SHEET

EASY SHADOW DOORWAY DETAILS

Groove Manufacturing Group Inc. · Baseboard Reveal ESR series · Floor Reveal ESR-F series

DOORWAYS Carry the shadow line from the base, up and around every door opening.

Use the same Easy Shadow panel and the same shadow line size at the doorway as at the base of the wall. Jamb legs and a head panel are cut from straight panels, with Edge B and the reveal facing the door frame. Mitred corners keep the line unbroken.

1 APPLICATION A · REVEAL SURROUND

Easy Shadow panel (12") — Shadow line — Edge A tape joint — Elevation · Not to scale

DOORWAY ELEVATION

REVEAL EXAGGERATED FOR CLARITY

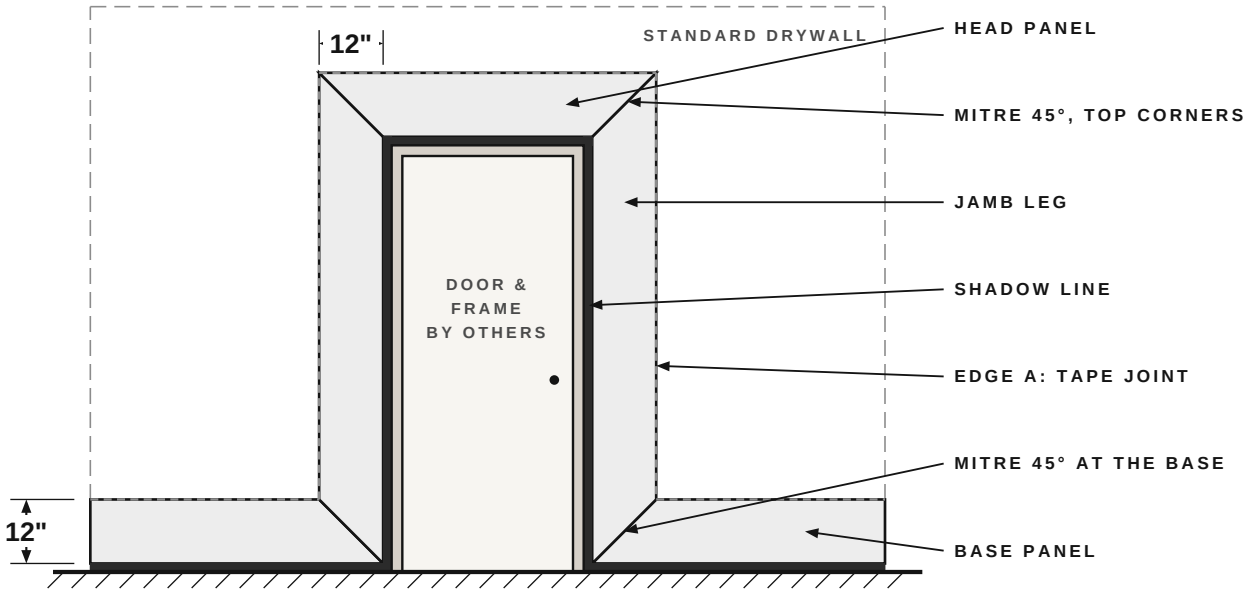

2 SECTIONS AT THE FRAME · BASEBOARD REVEAL

Green = finished face — Orange = PVC reveal (factory-glued) — Not to scale

JAMB

PLAN · ESR14, 1/2" BOARD SHOWN

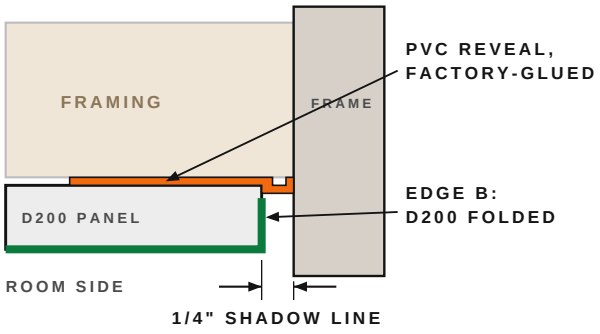

HEAD

SECTION · ESR14, 1/2" BOARD SHOWN

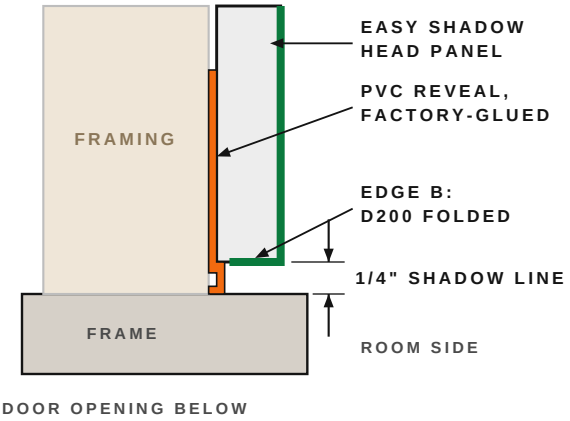

© 2026 Groove Manufacturing Group Inc. All rights reserved.

EASY SHADOW DOORWAY DETAILS

Groove Manufacturing Group Inc. · Baseboard Reveal ESR series · Floor Reveal ESR-F series

1 SECTIONS AT THE FRAME · FLOOR REVEAL

Green = finished face Orange = PVC reveal (factory-glued) Not to scale

JAMB — PLAN · ESR-F500, 1/2" BOARD SHOWN

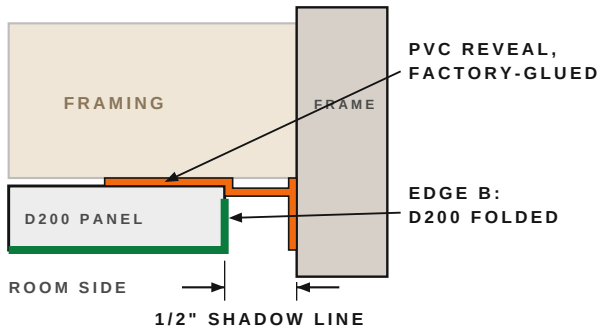

HEAD — SECTION · ESR-F500, 1/2" BOARD SHOWN

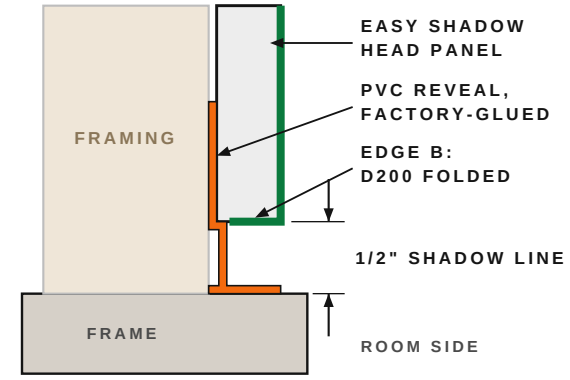

The foot of the Floor Reveal sits against the door frame, the same way it sits on the finished flooring at the base of the wall.

2 WHAT TO ORDER · APPLICATION A

No separate doorway part number: order straight panels to match the base. Floor Reveal: add 1/16" at each frame edge for the foot.

PIECE	QTY PER SIDE OF WALL	CUT LENGTH
Jamb leg	2	Frame height + shadow line + 12"
Head panel	1	Frame width + 2 x shadow line + 24"
Base panels	As the room needs	Run to the frame. Mitre the last 12" into the jamb leg.

Baseboard Reveal, 1/4": 36" x 80" frame. Two jamb legs at 92-1/4" and one head at 60-1/2". Three 8 ft panels per side.

Floor Reveal, 1/2": 36" x 80" frame. Two jamb legs at 92-9/16" and one head at 61-1/8". Three 8 ft panels per side.

3 ON SITE

1. Set the door frame first. Snap the reveal line around it at the shadow line size.
2. Cut the jamb legs and head from straight panels. Mitre the top corners at 45°, with the reveal to the frame.
3. Mitre the foot of each jamb leg and the end of each base panel at 45°, so the base line turns up the frame.
4. Fasten to the framing with Edge B to the frame. Tape Edge A into the standard drywall, finish and paint.

© 2026 Groove Manufacturing Group Inc. All rights reserved.

EASY SHADOW DOORWAY DETAILS

Groove Manufacturing Group Inc. · Baseboard Reveal ESR series · Floor Reveal ESR-F series

1 OTHER DOORWAY APPLICATIONS

B · OPEN DOORWAY — PLAN VIEW

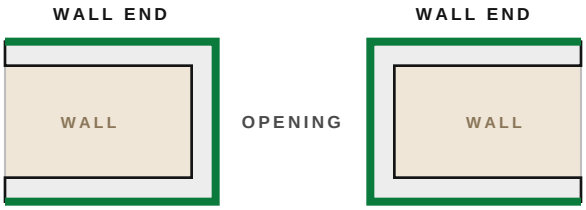

No door? Wrap the base reveal through the opening with 2x4 or 2x6 wall ends in the same series.

Order: series-WE4 or series-WE6, two per opening.
Example: ESR14-WE4-12-R.

C · CASED DOOR — ELEVATION

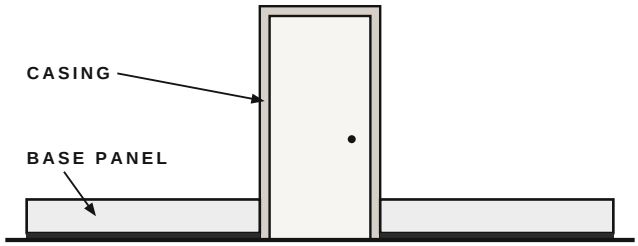

Traditional casing? Run the base panels to the casing and stop. No doorway pieces are needed.

Order: straight panels only.
Square-cut the panel end tight to the casing.

NOTES

1. Doorway corners are mitred on site. A U-shape wall end wrapping a stud opening (application B) needs no mitre.
2. The reveal lands tight to the door frame, the same way it lands on the finished flooring.
3. Doorways have no separate part number. Order straight panels in the same series and shadow line as the base.

© 2026 Groove Manufacturing Group Inc. All rights reserved.